


# Laminates: extrusion and adhesive

Broad portfolio addresses a wide variety of application requirements

TekniPlex manufactures a wide variety of extrusion and adhesive laminates to meet specific product performance requirements.

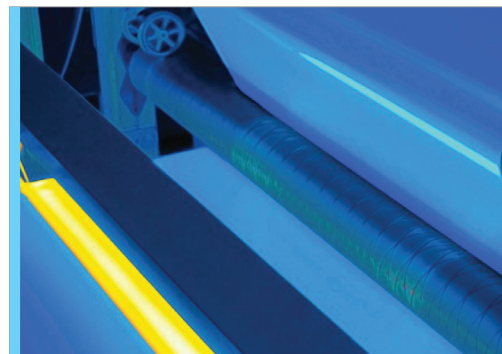

## OVERVIEW

With performance requirements continuing to evolve globally, we know how important it is that your packaging materials deliver the right performance attributes for your product. Because we have decades of experience working with a wide variety of materials, we can quickly find the right combination for you.

Here are just a few ways TekniPlex's lamination expertise can help you meet your performance objectives:

- **Custom.** Laminates can be custom developed to meet performance requirements.
- **Versatility.** PET, nylon, paper, foil, PE and ionomer laminations. We also have multiple sealing options (high, low, weld-seal, etc.) to suit your application.
- **Extrusion/adhesive laminates.** Our quality-driven manufacturing technology means that our structures will meet your objectives.
- **Pouch laminates.** We manufacture a wide variety of pouch laminations that can be converted into pouches. Our materials can be engineered to seal to paper, Tyvek® or to another laminate structure, depending on the application's requirements.
- **Multiple manufacturing facilities** to address redundancy requirements.
- **Printing.** Up to 10-color. Reverse or surface printing to support brand, marketing, product communication and/or safety messaging.
- **Inventory management capabilities** to help production objectives.

### Specialty peelable structure

We offer a specialty structure which features a peelable layer located outside the seal layer. This means that the seal layer can be tailored to meet the performance requirements of the medical device.

This high-performance laminate features a wide operating window which leads to faster line speeds.

The structure also features low extractables and consistent peel performance.



For additional information, please visit:  
[tekni-plex.com/healthcare](https://tekni-plex.com/healthcare)