


# Spike over cap

Over cap designed with a spike underneath performs double duty as a closure and opening device for blow, fill, seal bottles



## OVERVIEW

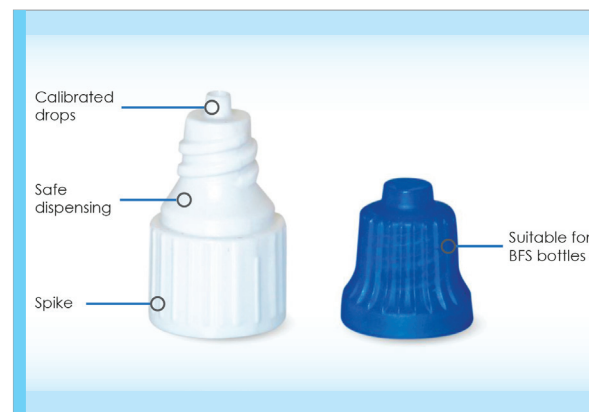

- Over cap in low density polyethylene (LDPE) and spike cap in polystyrene (PS).



- The bottle is pierced when the cap and the dropper are fully engaged.



- The spike under the over cap is made via **injection molding**; a process that produces no burrs, flashes or sharp edges.



- **Calibrated droppers** allow for precise dosing.

## MARKETS



Eye Drop



Pharmaceutical



Medical Device

## FEATURES

### How it works:

1. Install the white dropper on the bottle. The spike at the inner end of the cap will pierce the bottle, allowing the contents to flow.
2. Open the bottle.
3. Deliver the eye drops.
4. Close the bottle.



For additional information, please visit:  
[tekni-plex.com/healthcare](https://tekni-plex.com/healthcare)